


Multi-purpose IO module

for Grundfos AUTO_{ADAPT} pumps

Installation and operating instructions

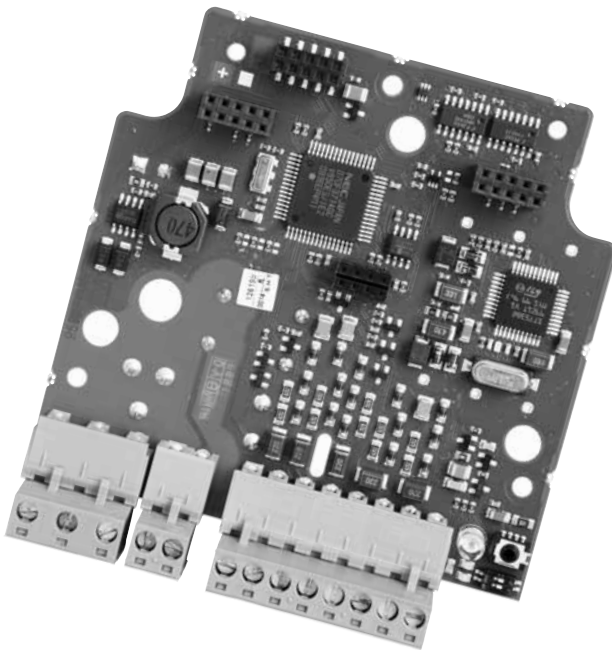

Multi-purpose IO module

Declaration of Conformity	5
English (GB)	
Installation and operating instructions.	8

Declaration of Conformity

GB Declaration of Conformity

We, Grundfos, declare under our sole responsibility that the product, IO module, to which this declaration relates, is in conformity with these Council directives on the approximation of the laws of the EC member states:

- Low Voltage Directive (2006/95/EC).
Standard used: EN 61010-1: 2001.
- EMC Directive (2004/108/EC).
Standard used: EN 61326-1: 2006.

CZ Prohlášení o shodě

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek Modul IO, na nějž se toto prohlášení vztahuje, je v souladu s ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství v oblastech:

- Směrnice pro nízkonapěťové aplikace (2006/95/ES).
Použitá norma: EN 61010-1: 2001.
- Směrnice pro elektromagnetickou kompatibilitu (EMC) (2004/108/ES).
Použitá norma: EN 61326-1: 2006.

DE Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt E/A-Modul, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmt:

- Niederspannungsrichtlinie (2006/95/EG).
Norm, die verwendet wurde: EN 61010-1: 2001.
- EMV-Richtlinie (2004/108/EG).
Norm, die verwendet wurde: EN 61326-1: 2006.

GR Δήλωση Συμμόρφωσης

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα Μονάδα IO, στα οποία αναφέρεται η παρούσα δήλωση, συμμορφώνονται με τις εξής Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ:

- Οδηγία χαμηλής τάσης (2006/95/ΕΚ).
Πρότυπο που χρησιμοποιήθηκε: EN 61010-1: 2001.
- Οδηγία Ηλεκτρομαγνητικής Συμβατότητας (EMC) (2004/108/ΕΚ).
Πρότυπο που χρησιμοποιήθηκε: EN 61326-1: 2006.

FR Déclaration de Conformité

Nous, Grundfos, déclarons sous notre seule responsabilité, que le produit Module IO, auquel se réfère cette déclaration, est conforme aux Directives du Conseil concernant le rapprochement des législations des Etats membres CE relatives aux normes énoncées ci-dessous :

- Directive Basse Tension (2006/95/CE).
Norme utilisée : EN 61010-1 : 2001.
- Directive Compatibilité Electromagnétique CEM (2004/108/CE).
Norme utilisée : EN 61326-1 : 2006.

IT Dichiarazione di Conformità

Grundfos dichiara sotto la sua esclusiva responsabilità che il prodotto Modulo I/O, al quale si riferisce questa dichiarazione, è conforme alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE:

- Direttiva Basso Tensione (2006/95/CE).
Norma applicata: EN 61010-1: 2001.
- Direttiva EMC (2004/108/CE).
Norma applicata: EN 61326-1: 2006.

BG Декларация за съответствие

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продукта IO модул, за който се отнася настоящата декларация, отговаря на следните указания на Съвета за уеднаквяване на правните разпоредби на държавите членки на ЕС:

- Директива за нисковолтови системи (2006/95/EC).
Приложен стандарт: EN 61010-1: 2001.
- Директива за електромагнитна съвместимост (2004/108/EC).
Приложен стандарт: EN 61326-1: 2006.

DK Overensstemmelseerklæring

Vi, Grundfos, erklærer under ansvar at produktet, IO-modul, som denne erklæring omhandler, er i overensstemmelse med disse af Rådets direktiver om indbyrdes tilnærmelse til EF-medlemsstaternes lovgivning:

- Lavspændingsdirektivet (2006/95/EF).
Anvendt standard: EN 61010-1: 2001.
- EMC-direktivet (2004/108/EF).
Anvendt standard: EN 61326-1: 2006.

EE Vastavusdeklaratsioon

Meie, Grundfos, deklareerime enda ainuvastutusel, et toode IO moodul, mille kohta käesolev juhend käib, on vastavuses EÜ Nõukogu direktiividega EMÜ liikmesriikide seaduste ühitamise kohta, mis käsitlevad:

- Madalpinge direktiiv (2006/95/EC).
Kasutatud standard: EN 61010-1: 2001.
- Elektromagnetilise ühilduvuse (EMC direktiiv) (2004/108/EC).
Kasutatud standard: EN 61326-1: 2006.

ES Declaración de Conformidad

Nosotros, Grundfos, declaramos bajo nuestra propia responsabilidad que el producto Módulo IO, al cual se refiere esta declaración, está conforme con las Directivas del Consejo en la aproximación de las leyes de los Estados Miembros del EM:

- Directiva de Baja Tensión (2006/95/CE).
Norma aplicada: EN 61010-1: 2001.
- Directiva EMC (2004/108/CE).
Norma aplicada: EN 61326-1: 2006.

HR Izjava o usklađenosti

Mi, Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod IO modul, na koji se ova izjava odnosi, u skladu s direktivama ovog Vijeća o usklađivanju zakona država članica EU:

- Direktiva za niski napon (2006/95/EZ).
Korištena norma: EN 61010-1: 2001.
- Direktiva za elektromagnetsku kompatibilnost (2004/108/EZ).
Korištena norma: EN 61326-1: 2006.

LV Paziņojums par atbilstību prasībām

Sabiedrība GRUNDFOS ar pilnu atbildību dara zināmu, ka produkts Ievadu/izvadu modulis, uz kuru attiecas šis paziņojums, atbilst šādām Padomes direktīvām par tuvināšanos EK dalībvalstu likumdošanas normām:

- Zema sprieguma direktīva (2006/95/EC).
Piemērotais standarts: EN 61010-1: 2001.
- Elektromagnētiskās saderības direktīva (2004/108/EC).
Piemērotais standarts: EN 61326-1: 2006.

LT Atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškiame, kad gaminsys IO modulius, kuriam skirta ši deklaracija, atitinka šias Tarybos Direktyvas dėl Europos Ekonominės Bendrijos šalių narių įstatymų suderinimo:

- Žemų įtampų direktyva (2006/95/EB).
- Taikomas standartas: EN 61010-1: 2001.
- EMS direktyva (2004/108/EB).
- Taikomas standartas: EN 61326-1: 2006.

NL Overeenkomstighedsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat het product IO-module waarop deze verklaring betrekking heeft, in overeenstemming is met de Richtlijnen van de Raad in zake de onderlinge aanpassing van de wetgeving van de EG lidstaten betreffende:

- Laagspannings Richtlijn (2006/95/EC).
- Gebruikte norm: EN 61010-1: 2001.
- EMC Richtlijn (2004/108/EC).
- Gebruikte norm: EN 61326-1: 2006.

PL Deklaracja zgodności

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze wyroby Moduł IO, których deklaracja niniejsza dotyczy, są zgodne z następującymi wytycznymi Rady d/s ujednolicenia przepisów prawnych krajów członkowskich WE:

- Dyrektywa Niskonapięciowa (LVD) (2006/95/WE).
- Zastosowana norma: EN 61010-1: 2001.
- Dyrektywa EMC (2004/108/WE).
- Zastosowana norma: EN 61326-1: 2006.

RU Декларация о соответствии

Мы, компания Grundfos, со своей ответственностью заявляем, что изделия Модуль IO, к которым относится настоящая декларация, соответствуют следующим Директивам Совета Евросоюза об унификации законодательных предписаний стран-членов ЕС:

- Низковольтное оборудование (2006/95/EC).
- Применяющийся стандарт: EN 61010-1: 2001.
- Электромагнитная совместимость (2004/108/EC).
- Применяющийся стандарт: EN 61326-1: 2006.

SK Prehlásenie o konformite

My firma Grundfos prehlasujeme na svoju plnú zodpovednosť, že výrobok Moduł IO, na ktorý sa toto prehlásenie vzťahuje, je v súlade s ustanovením smernice Rady pre zblíženie právnych predpisov členských štátov Európskeho spoločenstva v oblastiach:

- Smernica pre nízkonapäťové aplikácie (2006/95/EC).
- Použitá norma: EN 61010-1: 2001.
- Smernica pre elektromagnetickú kompatibilitu (2004/108/EC).
- Použitá norma: EN 61326-1: 2006.

RS Deklaracija o konformitetu

Mi, Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod IO modul, na koji se ova izjava odnosi, u skladu sa direktivama Saveta za uskladjivanje zakona država članica EU:

- Direktiva niskog napona (2006/95/EC).
- Korišćen standard: EN 61010-1: 2001.
- EMC direktiva (2004/108/EC).
- Korišćen standard: EN 61326-1: 2006.

SE Försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkten IO-modul, som omfattas av denna försäkran, är i överensstämmelse med rådets direktiv om inbördes närmande till EU-medlemsstaternas lagstiftning, avseende:

- Lågspänningsdirektivet (2006/95/EG).
- Tillämpad standard: EN 61010-1: 2001.
- EMC-direktivet (2004/108/EG).
- Tillämpad standard: EN 61326-1: 2006.

HU Megfelelősségi nyilatkozat

Mi, a Grundfos, egyedüli felelősséggel kijelentjük, hogy a IO modul termék, amelyre jelen nyilatkozik vonatkozik, megfelel az Európai Unió tagállamainak jogi irányműveit összehangoló tanács alábbi előírásainak:

- Kíszfeszültségű Direktíva (2006/95/EK).
- Alkalmazott szabvány: EN 61010-1: 2001.
- EMC Direktíva (2004/108/EK).
- Alkalmazott szabvány: EN 61326-1: 2006.

UA Свідчення про відповідність вимогам

Компанія Grundfos заявляє про свою виключну відповідальність за те, що продукт Модуль IO, на який поширюється дана декларація, відповідає таким рекомендаціям Ради з уніфікації правових норм країн - членів ЕС:

- Низька напруга (2006/95/EC).
- Стандарти, що застосовувалися: EN 61010-1: 2001.
- Електромагнітна сумісність (2004/108/EC).
- Стандарти, що застосовувалися: EN 61326-1: 2006.

PT Declaração de Conformidade

A Grundfos declara sob sua única responsabilidade que o produto Módulo IO, ao qual diz respeito esta declaração, está em conformidade com as seguintes Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da CE:

- Directiva Baixa Tensão (2006/95/CE).
- Norma utilizada: EN 61010-1: 2001.
- Directiva EMC (compatibilidade electromagnética) (2004/108/CE).
- Norma utilizada: EN 61326-1: 2006.

RO Declarație de Conformitate

Noi, Grundfos, declarăm pe propria răspundere că produsele Modul IO, la care se referă această declarație, sunt în conformitate cu aceste Directive de Consiliu asupra armonizării legilor Statelor Membre CE:

- Directiva Tensiune Joasă (2006/95/CE).
- Standard utilizat: EN 61010-1: 2001.
- Directiva EMC (2004/108/CE).
- Standard utilizat: EN 61326-1: 2006.

SI Izjava o skladnosti

V Grundfosu s polno odgovornostjo izjavljamo, da so naši izdelki IO modul, na katere se ta izjava nanaša, v skladu z naslednjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES:

- Direktiva o nizki napetosti (2006/95/ES).
- Uporabljena norma: EN 61010-1: 2001.
- Direktiva o elektromagnetni združljivosti (EMC) (2004/108/ES).
- Uporabljena norma: EN 61326-1: 2006.

FI Vaatimustenmukaisuusvakuutus

Me, Grundfos, vakuutamme omalla vastuullamme, että tuote IO-moduulii, jota tämä vakuutus koskee, on EY:n jäsenvaltioiden lainsäädännön yhdenmukaistamisen tähtäyksien Euroopan neuvoston direktiivien vaatimusten mukainen seuraavasti:

- Pienjännittdirektiivi (2006/95/EY).
- Sovellettu standardi: EN 61010-1: 2001.
- EMC-direktiivi (2004/108/EY).
- Sovellettu standardi: EN 61326-1: 2006.

TR Uygunluk Bildirgesi

Grundfos olarak bu beyannameye konu olan IO modülü ürünlerinin, AB Üyesi Ülkelerin kanunlarını birbirine birbirine yaklaştıranın Konsey Direktiflerine uyumlu olduğunu yalnızca bizim sorumluluğumuz altında olduğunu beyan ederiz:

- Düşük Voltaj Yönetmeliği (2006/95/EC).
- Kullanılan standart: EN 61010-1: 2001.
- EMC Direktifi (2004/108/EC).
- Kullanılan standart: EN 61326-1: 2006.

CN 产品合格声明书

我们格兰富在我们的全权责任下声明，产品 IO 模块，即该合格证所指之产品，符合欧共体使其成员国法律趋于一致的以下欧共理事会指令：

- 低电压指令 (2006/95/EC)。
所用标准: EN 61010-1: 2001。
- 电磁兼容性指令 (2004/108/EC)。
所用标准: EN 61326-1: 2006。

JP 適合宣言

Grundfos は、その責任の下に、IO モジュール 製品が EC 加盟諸国の法規に関連する、以下の評議会指令に適合していることを宣言します：

- 低電圧指令 (2006/95/EC)。
適用規格 : EN 61010-1: 2001。
- EMC 指令 (2004/108/EC)。
適用規格 : EN 61326-1: 2006。


KO

Grundfos
EC

I/O

Bjerringbro, 16th July 2010

- : (2006/95/EC).
: EN 61010-1: 2001.
- EMC (2004/108/EC).
: EN 61326-1: 2006.

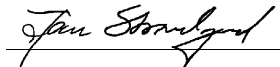

Jan Strandgaard
Technical Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and
empowered to sign the EC declaration of conformity.

English (GB) Installation and operating instructions

Original installation and operating instructions.

CONTENTS

	Page
1. Symbols used in this document	8
2. Introduction	8
3. Applications	9
3.1 Operating mode	10
4. Installation	11
4.1 Pit with one pump and a CIU unit	11
4.2 Pit with two or more pumps and a CIU unit	11
4.3 Replacement of pump	11
4.4 Removing a pump for service	11
4.5 EMC-correct installation	11
5. IO module	12
5.1 Alarm relay output	14
5.2 Communication between CIU unit and pumps	14
5.3 Resetting of external alarm	15
5.4 High water level	15
5.5 General-purpose alarm	16
5.6 LEDs	16
5.7 LED for indication of IR communication	18
6. R100 remote control	18
6.1 Menu OPERATION	21
6.2 Menu STATUS (SYSTEM)	22
6.3 Menu STATUS (PUMP 1)	23
6.4 Menu SYSTEM INSTALLATION	24
7. Fault finding	26
7.1 Grundfos alarms and warnings	26
8. Overview of inputs and outputs	27
9. Technical data	28
9.1 Relay output	28
9.2 Digital inputs	28
10. Maintenance	28
11. Service	28
12. Disposal	28



Warning

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document



Warning

If these safety instructions are not observed, it may result in personal injury!



Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment!



Note

Notes or instructions that make the job easier and ensure safe operation.

2. Introduction

This manual describes how to connect and configure the multi-purpose IO module fitted in the CIU unit (CIU = Communication Interface Unit). The CIU unit is a data collection and communication unit.

The manual also describes the communication between the CIU unit and the pumps when using the Grundfos R100 remote control.

Figure 1 and the table below give an overview of the modules and the installation and operating instructions supplied with the CIU unit.

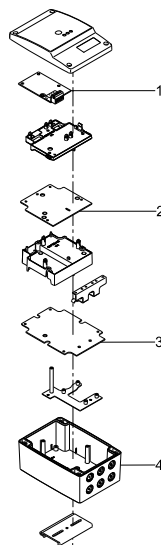


Fig. 1 Modules in the CIU unit

Pos.	Description
1	CIM 2XX module. See installation and operating instructions for the CIM module and the Quick guide for the CIU unit.
2	IO module. See these installation and operating instructions and the Quick guide for the CIU unit.
3	Power supply and GENIbus module. See installation and operating instructions and Quick guide for the CIU unit.
4	CIU unit. See installation and operating instructions and Quick guide for the CIU unit.

The CIU unit is used as an interface for the following:

- Configuration of pump parameters required for water level control.
- Online monitoring of pump pit and pump values.
- Manual water level control (forced start/stop).
- Obtaining of measured and logged data that is very useful for pump service and pit optimisation.

Note

The CIU unit is not used for water level control in the pump pit.

3. Applications

The CIU unit is designed for use together with Grundfos DP, EF, SL1, SLV and SEG AUTO_{ADAPT} pumps.

Communication between the CIU unit and the pumps can be established via the main network interface in the CIU unit or with the Grundfos R100 remote control.

The following CIU units are available:

- CIU 902 (without CIM module)
- CIU 202 Modbus unit
- CIU 252 GSM/GPRS unit
- CIU 272 GRM unit (GRM = Grundfos Remote Management).

The CIU unit incorporates one or two modules:

- Multi-purpose IO module with I/O functionality, IR communication interface and powerline communication.
- CIM 2XX module (optional).

For further information about the CIM module fitted, see installation and operating instructions for the relevant CIM module.

If a CIM module is fitted in the CIU unit, sensors connected to the digital input of the IO module can be remotely monitored by a centrally located SCADA system.

Caution

When the CIU unit is used, the internal alarm relay in the pump should not be used. The CIU unit takes over the alarm function.

Note

If the IO module is used in a manner not specified by Grundfos, the protection provided by the IO module may be impaired.

3.1 Operating mode

The user has to decide which operating mode to use for the actual system.

Possible operating modes:

- single-pit mode
- multi-pit mode.

The pump is factory-set to operate in single-pit mode.

If the system is to operate in multi-pit mode, contact your local Grundfos company.

Caution *Single-pit mode and multi-pit mode cannot operate at the same time.*

3.1.1 Single-pit mode

In single-pit mode, all pumps (up to four) connected to the CIU unit are installed in the same pit. The load is automatically distributed on the pumps as they are operating alternately. If the flow into the pit is increased, a second pump is automatically started (parallel operation). See fig. 2.

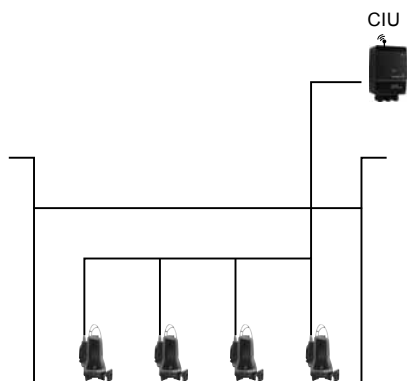


Fig. 2 Single-pit mode

TM04 7307 2310

3.1.2 Multi-pit mode

In multi-pit mode, the pumps connected to the CIU unit are installed in separate pump pits (up to four). A CIU unit can monitor up to four pumps. See fig. 3.

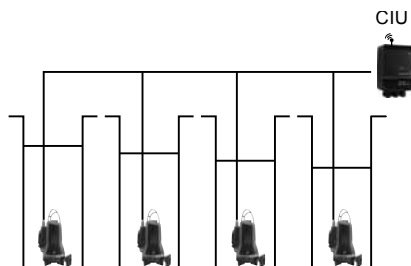


Fig. 3 Multi-pit mode

In multi-pit mode, the CIU unit regards the connected pumps as four systems with their own settings.

If the system is to operate in multi-pit mode, contact your local Grundfos company.

TM04 7308 2310

4. Installation

Note

For further information about setup of multi-pit mode, contact your local Grundfos company.



Warning

Before beginning installation, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

The installation procedure depends on the number of pumps to be installed, i.e. one or more pumps. In the following, only systems with one CIU unit will be described.

To ensure easy and correct installation, we recommend you to carefully follow the order of installation below.

4.1 Pit with one pump and a CIU unit

1. Install the pump in the pit.
2. Install the CIU unit.
See installation and operating instructions for the CIU unit.

Caution

The GENibus connection is not used in this application.

3. Connect all relevant leads to the IO module.
See section 5. *IO module*.
4. Connect all relevant leads to the CIM module, if fitted.
See installation and operating instructions for the relevant CIM module.
5. Switch on the power supply to the CIU unit and the pump. The CIU unit automatically establishes communication with the pump.
6. Check that the CIU unit communicates with the pump, using the Grundfos R100 remote control.
See section 6.1.1 *CIU unit and pump status*.

4.2 Pit with two or more pumps and a CIU unit

1. Install the pumps in the pit.
2. Install the CIU unit.
See installation and operating instructions for the CIU unit.

Caution

The GENibus connection is not used in this application.

3. Connect all relevant leads to the IO module.
See section 5. *IO module*.
4. Connect all relevant leads to the CIM module, if fitted.
See installation and operating instructions for the relevant CIM module.
5. Switch on the power supply to the CIU unit and pump 1. The CIU unit automatically establishes communication with the pump.

6. Check that the CIU unit communicates with pump 1, using the Grundfos R100 remote control.
See section 6.1.1 *CIU unit and pump status*.
7. Switch on the power supply to pump 2.
8. Check with the R100 that the CIU unit communicates with pump 2.
See section 6.1.1 *CIU unit and pump status*.
9. Repeat points 7 and 8 until all pumps have been switched on.

4.3 Replacement of pump

1. Switch off the power supply to the system.
2. Replace the pump.
3. Switch on the power supply to the system.
4. Establish communication with the pump, using the R100, and reset all addresses.
See section 6.4.6 *System self-configuration*.
5. Set new addresses with the R100.
See section 4.2 *Pit with two or more pumps and a CIU unit*.

4.4 Removing a pump for service

1. Switch off the power supply to the system.
2. Remove the pump.
3. Switch on the power supply to the system.
4. Establish communication with the pump, using the R100, and reset all addresses.
See section 6.4.6 *System self-configuration*.
5. Set new addresses with the R100.
See section 4.2 *Pit with two or more pumps and a CIU unit*.

Note

When a pump is removed from the system, the warning or alarm "Communication fault, pump" will appear.

4.5 EMC-correct installation

In order to ensure correct and stable function, it is very important to follow the guidelines below.

Grundfos recommendations

Use only screened signal cables for all inputs and outputs.


Note

Any isolating plastic tape between screen and sheath must be removed before mounting the cable in the earth clamp.

Note

Do not twist screen ends, as this will destroy the screen effect at high frequencies.

5. IO module

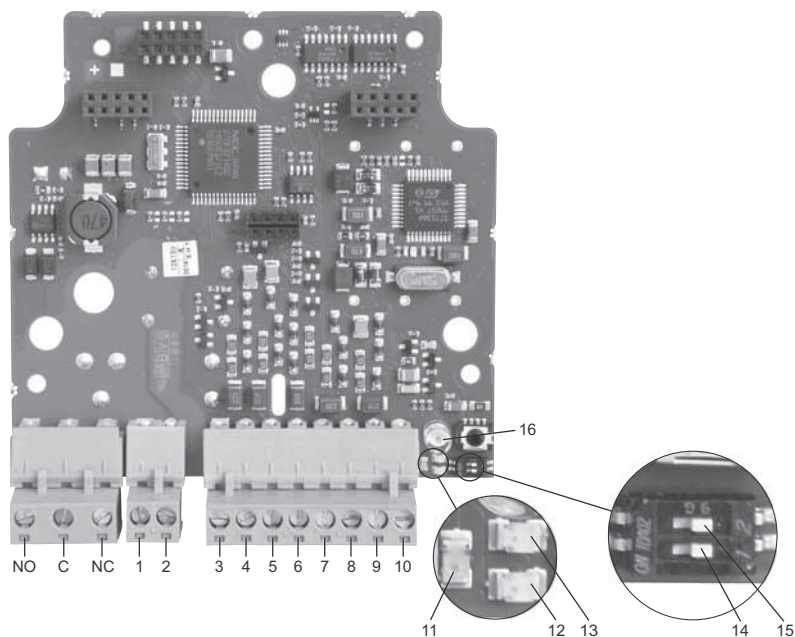

TM04 6784 2 110

Fig. 4 IO module

Pos.	Designation	Description	Section
NO	NO		
C	C	Terminals for alarm relay output.	5.1 Alarm relay output
NC	NC		
1	A	Terminals for powerline communication.	5.2 Communication between CIU unit and pumps
2	B		
3	DI1	Terminals for external alarm reset (NO).	5.3 Resetting of external alarm
4	GND		
5	DI2 (NO)		
6	DI2 (NC)	Terminals for high water level.	5.4 High water level
7	GND		
8	DI3 (NO)		
9	DI3 (NC)	Terminals for external alarm.	5.5 General-purpose alarm
10	GND		
11	LED1	Red status LED for indication of alarm. Flashes when an alarm has been generated.	
12	LED2	Yellow status LED for indication of IR activity. Flashes when IR communication is active.	5.6 LEDs
13	LED3	Green status LED for indication of system status. Flashes when communication to a pump has been established.	

Pos.	Designation	Description	Section
14	SW1	This DIP switch is used to enable the NC contactor function for "High water level". Default is OFF.	<i>5.4 High water level</i>
15	SW2	This DIP switch is used to enable the NC contactor function for general-purpose alarm. Default is OFF.	<i>5.5 General-purpose alarm</i>
16	IR LED	LED for indication of IR communication with the Grundfos R100 remote control.	<i>5.7 LED for indication of IR communication</i>

The terminals on the IO module are described in the following sections. See also fig. 4.

5.1 Alarm relay output

The alarm relay of the IO module has two functions. It can be used either as a normally open (NO) relay or as a normally closed (NC) relay.

The alarm relay output is activated by any alarm in the system. If the alarm disappears, the alarm relay is automatically reset.

The alarm relay can also be activated by one of these inputs:

- input for high water level (NO/NC).
– See section 5.4 *High water level*.
- input for external alarm (NO/NC).
– See section 5.5 *General-purpose alarm*.

Note *Maximum contact load: 230 VAC, 2 A.*

The alarm relay can be manually reset via the relay reset input. See section 5.3 *Resetting of external alarm*.

For connections, see fig. 5 and section 5. *IO module*.

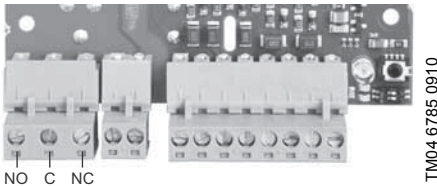


Fig. 5 Alarm relay output

Pos.	Description
NO	Use this terminal when the relay is to be used as a normally open relay.
C	Common terminal.
NC	Use this terminal when the relay is to be used as a normally closed relay.

5.2 Communication between CIU unit and pumps

The IO module communicates with each pump via powerline communication. Each pump in the pit has a unique internal number (GENIbus number). This GENIbus number is set automatically by the controller built into the Grundfos pumps. See section 4. *Installation*.

5.2.1 Connecting the communication leads

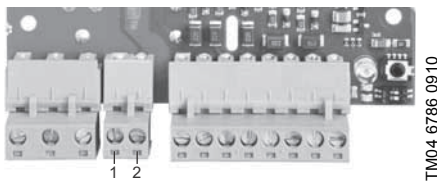


Fig. 6 Communication

Terminals 1 and 2 are used to establish communication with each pump. If more than one pump are installed in the system, the leads are to be connected as shown in fig. 7.

Example

Leads 4 and 6 from each power supply cable must be connected in the lower part of the terminal block, or similar, used for communication. The terminal block is not supplied with the product.

In the upper part of the terminal block, a parallel connection is to be made. Then connect lead 4 to terminal (pos. 1) and lead 6 to terminal (pos. 2). See fig. 7.

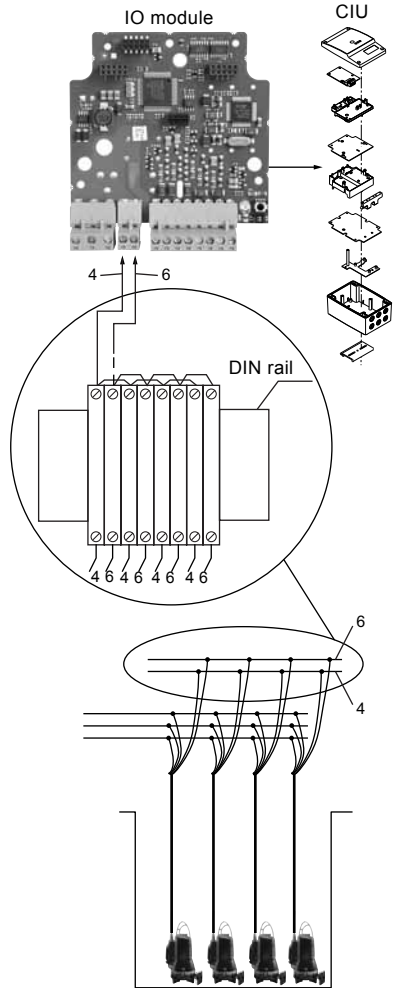


Fig. 7 Powerline connection

Connection

Terminal	Lead number	Data signal
1	4	A
2	6	B

5.3 Resetting of external alarm

The IO module has one digital input that is used to reset the alarm relay output. Connect the resetting switch/contact as shown in fig. 8.

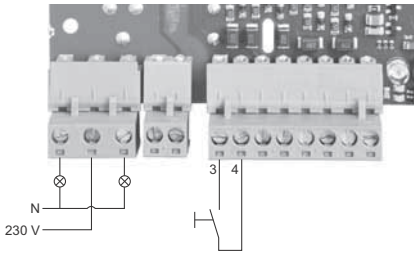


Fig. 8 Alarm resetting (manual resetting)

TM04 6788 2110

5.4 High water level

See fig. 9.

The IO module has one digital input (with NO/NC options) that can be used for detection of high water level. Before the NC option can be used, it must be enabled by setting the DIP switch to ON (left) (pos. 14). See fig. 4.

Use terminal (pos. 5) when an NO contact is to be used to indicate high water level.

Use terminal (pos. 6) when an NC contact is to be used to indicate high water level. See fig. 9.

Caution Only one terminal is to be used.

The input for high water level (NO/NC) triggers the alarm relay, and one or more pumps are started.

If the CIU unit incorporates a CIM 252 GSM/GPRS module, an SMS message can be sent to a centrally located SCADA system and/or directly to a mobile phone.

If the system is connected to GRM, an SMS message indicating high water level can be sent by the GRM server, if requested.

Example

The input for high water level triggers the alarm relay, and the red indicator light illuminates, indicating abnormal operation.

The green indicator light indicating normal operation is off. LED1 (pos. 11) flashes. The number of flashes indicates the current alarm. See section 7.1.1 *System alarms and warnings* and fig. 9.

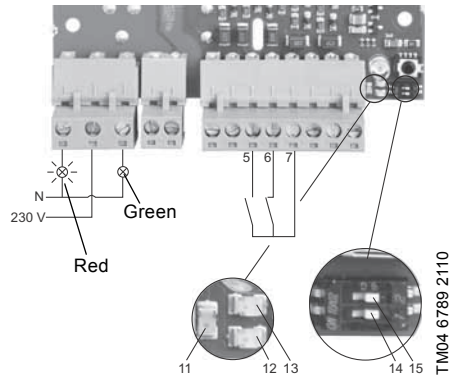


Fig. 9 Detection of high water level

TM04 6789 2110

5.5 General-purpose alarm

See fig. 10.

The input for external alarm (NO/NC) triggers the alarm relay as long as it is enabled. Before the NC option can be used, it must be enabled by setting the DIP switch to ON (left) (pos. 15). See fig. 4.

The user can connect any alarm sensor or switch to this input.

If the CIU unit incorporates a CIM 252 GSM/GPRS module, an SMS message can be sent to a centrally located SCADA system and/or directly to a mobile phone.

If the system is connected to GRM, an SMS message indicating a general-purpose alarm can be sent by the GRM server, if requested.

Example 1

An overflow float switch has been installed in the system, and it has been activated. The overflow float switch triggers the alarm relay, and the red indicator light illuminates, indicating abnormal operation.

The green indicator light indicating normal operation is off. LED1 (pos. 11) flashes. The number of flashes indicates the current alarm. See section

7.1.1 *System alarms and warnings* and fig. 10.

Example 2

A switch has been installed in the pit manhole cover. If the manhole cover is open, the switch triggers the alarm relay, and the red indicator light illuminates, indicating abnormal operation.

The green indicator light indicating normal operation is off. LED1 (pos. 11) flashes. The number of flashes indicates the current alarm. See section

7.1.1 *System alarms and warnings* and fig. 10.

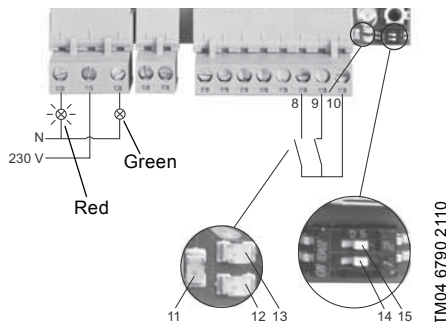


Fig. 10 Detection of overflow

5.6 LEDs

The IO module has three LEDs.

The three LEDs are intended for use during installation and commissioning. They are only visible when the cover of the CIU unit has been removed.

See fig. 11.

- Red status LED (LED1) (pos. 11) for indication of alarm.
See section 5.6.1 *LED1 for indication of alarm*.
- Yellow status LED (LED2) (pos. 12) for indication of IR activity.
See section 5.6.2 *LED2 for indication of IR activity*.
- Green status LED (LED3) (pos. 13) for indication of system status.
See section 5.6.3 *LED3 for indication of system status*.

During start-up, the LEDs will flash in a circular counter-clockwise pattern for about two seconds.

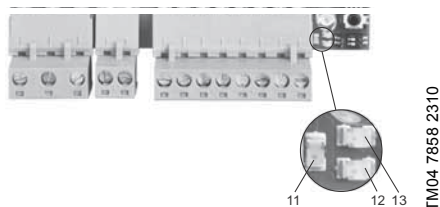


Fig. 11 Status LEDs

5.6.1 LED1 for indication of alarm

LED1 (pos. 11) flashes red when an alarm is generated. A special flash pattern is used to indicate individual alarms.

See section 7.1 *Grundfos alarms and warnings*.


Only CIU events will be indicated by LED1.

5.6.2 LED2 for indication of IR activity

LED2 (pos. 12) flashes yellow when IR communication has been established via the Grundfos R100 remote control.

5.6.3 LED3 for indication of system status

The LED3 (pos. 13) flashes green when communication to one or more pumps has been established. If the IO module cannot recognise the pumps, the LED3 (pos. 13) will be permanently green.

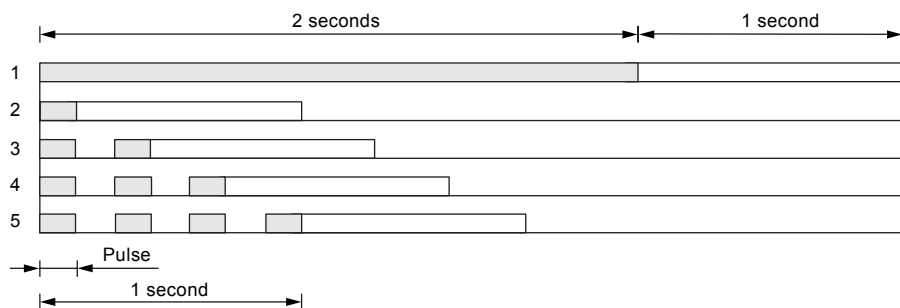

TM04 7863 2410

Fig. 12 LED flash pattern during start-up

Pos.	LED3 status	Description
1	Illuminates for 2 seconds, then a delay of 1 second.	No pumps detected by the IO module.
2	Pulsating green, 1 pulse per second, then a delay of 1 second.	One pump installed in the pit.
3	Pulsating green, 2 pulses per second, then a delay of 1 second.	Two pumps installed in the pit.
4	Pulsating green, 3 pulses per second, then a delay of 1 second.	Three pumps installed in the pit.
5	Pulsating green, 4 pulses per second, then a delay of 1 second.	Four pumps installed in the pit.

5.7 LED for indication of IR communication

When communication has been established using the Grundfos R100 remote control, LED2 (pos. 12) is flashing green.

The IO module is designed to communicate with the R100.

The R100 is used for the following purposes:

- to read system and pump status
- to read alarms and warnings
- to set or change application and pump parameters.

See section 6. *R100 remote control.*



Fig. 13 IR communication

TM04 6791 2310

6. R100 remote control

The CIU unit is designed for wireless IR communication with the Grundfos R100 remote control.

During communication, the R100 must be pointed at the CIU unit.

The R100 offers additional setting options and status displays for the pump.

The R100 displays are divided into eight parallel menus (fig. 14):

0. GENERAL

See operating instructions for the R100.

1. OPERATION

2. STATUS (SYSTEM)

3. STATUS (PUMP 1)

4. STATUS (PUMP 2)

5. STATUS (PUMP 3)

6. STATUS (PUMP 4)

7. SYSTEM INSTALLATION

The number stated above each individual display in fig. 14 refers to the section in which the display is described.

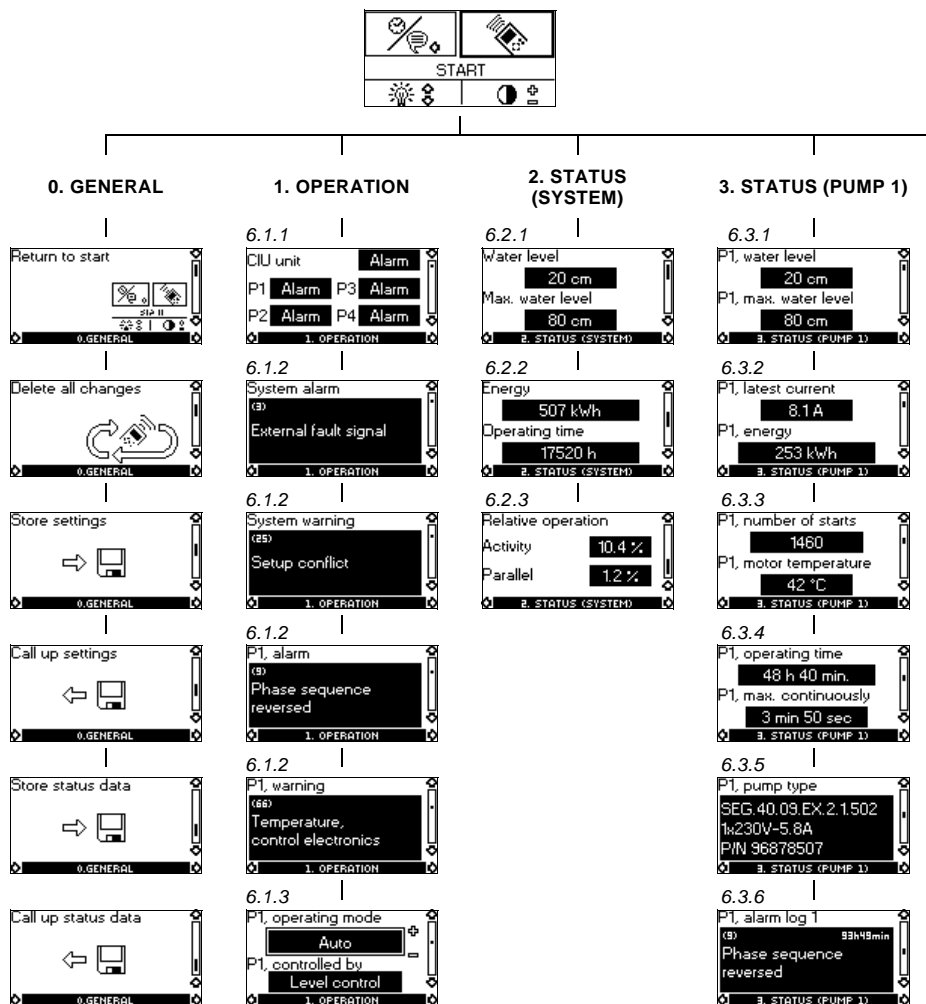








Fig. 14 R100 menu overview

The R100 menu overview continues on the next page.







Note

The menus **OPERATION** and **STATUS (pump)** are available for pumps 2, 3 and 4 if they are installed in the system. Five alarms can be stored in the alarm log for each pump. If a sixth alarm is received, the oldest alarm will automatically be removed.

4. STATUS (PUMP 2)

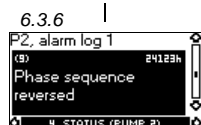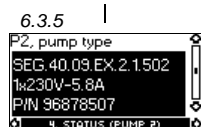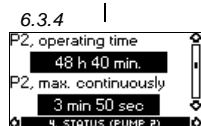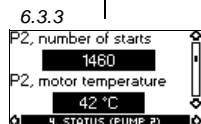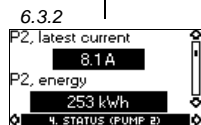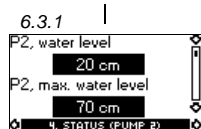

5. STATUS (PUMP 3)

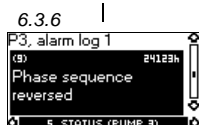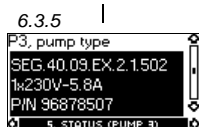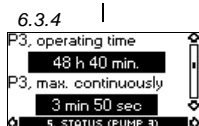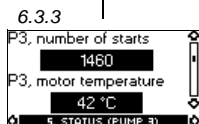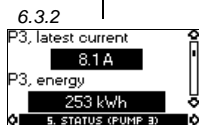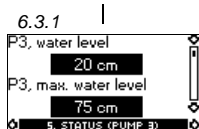

6. STATUS (PUMP 4)

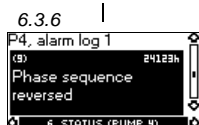
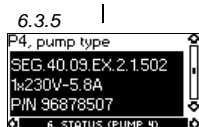
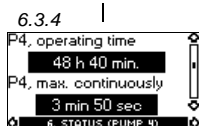
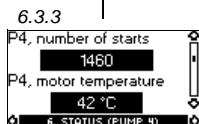
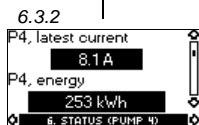
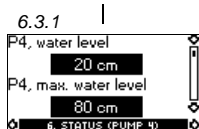
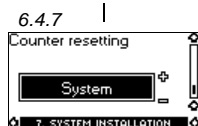
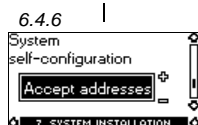
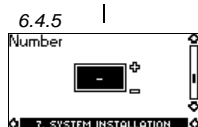
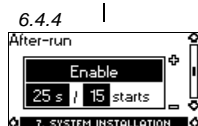
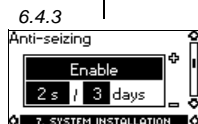
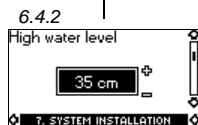
7. SYSTEM
INSTALLATION

Fig. 15 R100 menu overview (continued)


6.1 Menu OPERATION

Start communication by pointing the R100 at the CIU unit.

When communication between the R100 and the CIU unit has been established, the **OPERATION** menu appears in the display.

6.1.1 CIU unit and pump status

This display depends on the operating mode selected in display "P1, operating mode". See section 6.1.3 *Operating mode*.

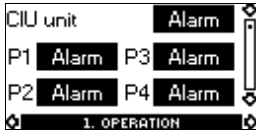

The CIU unit indicates its own status:

- OK
- Alarm
- Warn
- "!" (indicates no contact with an already detected pump).

A flashing P# indicates pump activity.


6.1.2 Fault indications

Fault indications are divided into two sections:

- System alarms and warnings
- Pump alarms and warnings.

System alarms and warnings

These displays show examples of a system alarm and a system warning.

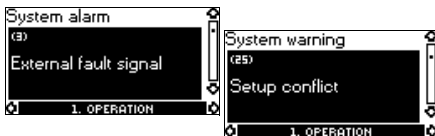


If a system fault has occurred, the cause will appear in this display. The value (3) is the fault code. See section 7.1.1 *System alarms and warnings*.

The fault indication can be reset in this display. If the fault cause has not disappeared when resetting is attempted, this will be indicated in the display.

Pump alarms and warnings

These displays show examples of a pump alarm and a pump warning.

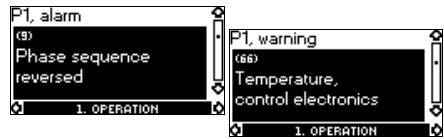

If a pump fault has occurred, the cause will appear in this display. The value (9) is the fault code. See section 7.1.2 *Pump alarms and warnings*.

The fault indication can be reset in this display. If the fault cause has not disappeared when resetting is attempted, this will be indicated in the display.

6.1.3 Operating mode

This display is used to set the operating mode and control source for each individual pump.

The pump will run in this mode until it is switched off. When the power supply is switched on again, the pump will start in "Auto" mode.



Select an operating mode:

- Auto (controlled by built-in sensors).
- Start (the pump is running until an alarm is generated or the pump is set to "Stop" or "Auto").
- Stop (stopped).
- Pump down (drains the pump pit).
- Level control (controlled by the built-in level pressure sensor).
- R100 (R100 remote control).
- Remotely (SCADA).


6.2 Menu STATUS (SYSTEM)

The displays appearing in this menu are status displays only. It is not possible to change or set values.

The status values in these displays are stated as a guide.

The counters for the system and each pump (1 to 4) can be reset in the **INSTALLATION** menu, display "Counter resetting". See section 6.4.7 *Counter resetting*.

6.2.1 Water level

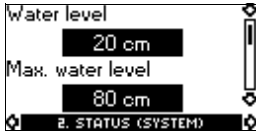


Field "Water level":

The value is the actual average of the water levels for all pumps in the pit.

Field "Max. water level":

Maximum measured water level for one of the pumps since last counter reset.

6.2.2 Energy

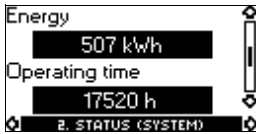


Field "Energy":

Total energy consumption for the system since last counter reset. The energy consumption is an accumulated value.

Field "Operating time":

Total number of operating hours since last counter reset.

6.2.3 Relative operation

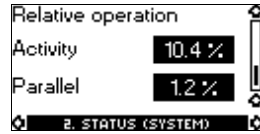

Field "Activity":

Percentage of pump operating time (one or more pumps) (1 + 2 + 3 + 4, fig. 16) during the last 30 days.

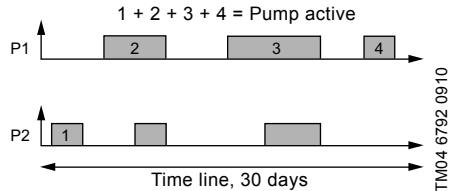


Fig. 16 Activity

Field "Parallel":

Operating time of two or more pumps running in parallel (1 + 2, fig. 17) during the last 30 days shown in percentage of total operating time.


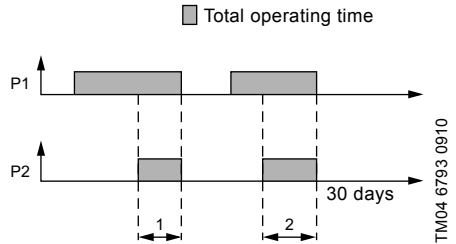


Fig. 17 Parallel operation

6.3 Menu STATUS (PUMP 1)

The pump status displays are only shown for pump 1. Similar displays are available for pumps 2 to 4, if installed.

6.3.1 P1, water level

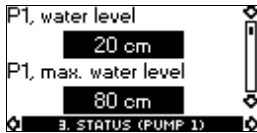


Field "P1, water level":

Actual water level in the pit measured by pump 1.

Field "P1, max. water level":

Maximum water level measured since last counter reset.

6.3.2 P1, latest current

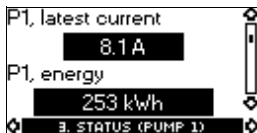

Field "P1, latest current":

In the case of single-phase connection, the display shows the supply current.


In the case of three-phase connection, the display shows the average current of all three phases, calculated as follows:

$$I_{\text{average}} = \frac{I_{L1} + I_{L2} + I_{L3}}{3} \text{ [A]}$$

Field "P1, energy":

Total energy consumption for pump 1 since last counter reset.

6.3.3 P1, number of starts

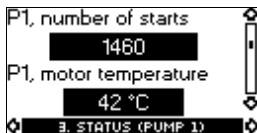

Field "P1, number of starts":

Total number of starts for pump 1 since last counter reset.

Field "P1, motor temperature":

Actual motor temperature measured with a Pt1000 sensor.

Repetitive accuracy: ± 3 %.

Absolute accuracy: ± 10 %.

6.3.4 P1, operating time




Field "P1, operating time":

Total number of operating hours and minutes for pump 1 since last counter reset.

Field "P1, max. continuously":

Maximum continuous operating time in minutes and seconds for pump 1 since last counter reset.

6.3.5 P1, pump type

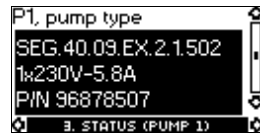


The following is shown in the display:

- pump type
- rated voltage and current
- product number.

6.3.6 P1, alarm log 1 (2 to 4)

For each pump, an alarm log is generated. The maximum number of events in the log is five.

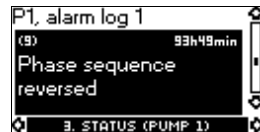

Field "(9)":

The value (9) is the fault code.

See section 7.1 Grundfos alarms and warnings.

Field "Phase sequence reversed":

This text string is the alarm log text.

See section 7.1 Grundfos alarms and warnings.

6.4 Menu SYSTEM INSTALLATION

In this menu, the settings to be considered when installing the pump are made. Values set in this menu apply to all pumps in the system.

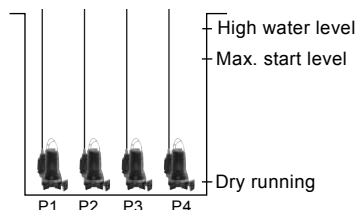


Fig. 18 Level indication

High water level	At this level, the alarm relay output is triggered, and an alarm is generated. Factory default setting: Max. start level + 10 cm.
Max. start level	The highest level at which the pump will start. Factory default setting: 25 cm.
Dry-running level	Dry-running level. Fixed value.

6.4.1 Max. start level

This display is only available in single-pit mode.




Set the maximum permissible start level for the pumps.

6.4.2 High water level

This display is only available in single-pit mode.


When "High water level" is reached, an alarm is generated, and all pumps will start.

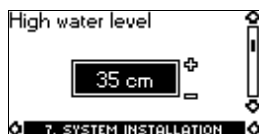

Set the water level that has to indicate "High water level". This value must be higher than "Max. start level" to avoid conflicting levels.

6.4.3 Anti-seizing

This display is only available in single-pit mode.

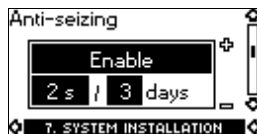

The anti-seizing function is enabled by selecting "Enable". Set operating time (seconds) and the interval (days) between activations of the anti-seizing function.

Factory default setting: 2 s / 3 days (operating time).

6.4.4 After-run

Warning




This function cannot be used on pumps with SuperVortex impeller. These pumps cannot start with air in the hydraulic system.



Warning

This function must not be used in Ex installations.

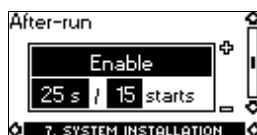

The after-run function is enabled by selecting "Enable". Set the operating time (seconds) and the interval (number of starts) between activations of the after-run function.

Factory default setting: 6 s / 15 starts.

6.4.5 Number

The number refers to the CIU unit. It is only necessary to change the number if several CIU units have to communicate at the same GENibus level.



Enter the desired pump number to change the factory-set pump number.

Factory default setting: 1.

TM04 6794 2310

6.4.6 System self-configuration

This display is used to enable the self-configuration function.



See section 4. *Installation*.

Select the desired function/action:

- Reset addresses
(resets all pump addresses)
- Accept addresses
(accepts all pump addresses)
- Copy parameters
(copies the parameters of pump 1 to the other pumps in the system).

6.4.7 Counter resetting


This display is used to reset system and pump counters.



Select the counters to be reset:

- All alarm logs (P1...P4)
- All pumps
- Pump 1
- Pump 2
- Pump 3
- Pump 4
- System.

When one of the above options has been chosen, a warning will appear in the display.

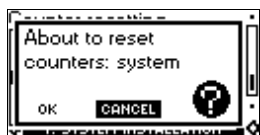

7. Fault finding

7.1 Grundfos alarms and warnings

The Grundfos alarms and warnings that may appear in the system are divided into two sections:

- System alarms and warnings
- Pump alarms and warnings.

7.1.1 System alarms and warnings



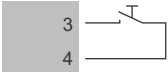
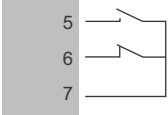
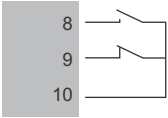
Code	System events	Description	LED1	Alarm	Warning
3	General-purpose alarm	The input for external alarm is activated.	1 pulse	•	-
10	Communication fault, pump	The internal communication between the CIU unit and one or more pumps has failed.	2 pulses	•	•
25	Setup conflict	Two or more pumps have the same internal GENIbus address.	3 pulses	•	•
191	High-level alarm	The high-level alarm has been triggered.	4 pulses	•	-
236	Pump 1 fault	One of the faults in section 7.1.2 <i>Pump alarms and warnings</i> has occurred.	5 pulses	•	•
237	Pump 2 fault		6 pulses	•	•
238	Pump 3 fault		7 pulses	•	•
239	Pump 4 fault		8 pulses	•	•

7.1.2 Pump alarms and warnings

Code	Pump events	Description	Alarm	Warning
9	Phase sequence reversed	The pump cannot start due to wrong phase sequence (two phases interchanged).	•	-
32	Overvoltage	The supply voltage to the pump exceeds the limit stated on the nameplate (+ 20 %).	•	-
40	Undervoltage	The supply voltage to the pump is below the limit stated on the nameplate (- 15 %).	•	-
48	Overload	Motor or pump is overloaded. The motor protection (I^2t) has tripped.	•	•
57	Dry running	The dry-running sensor has been activated.	•	•
65	Motor temperature (Pt1000)	The Pt1000 sensor has triggered the alarm relay. Fault code 65 is disabled as default.	•	•
66	Temperature, control electronics	The NTC sensor has triggered the alarm relay. Fault code 66 is disabled as default.	•	•
69	Thermal switch 1 in motor	Thermal switch 1 open (150 °C).	•	-
70	Thermal switch 2 in motor	Thermal switch 2 open (160 °C, single-phase, 170° C, three-phase).	•	-
82	Verification error, code area (ROM)	ROM content validation failed.	-	•
83	Verification error, parameter area (EEPROM)	EEPROM content validation failed.	-	•
191	High-level alarm	The water level has exceeded the limit set as "High water level".	-	•

8. Overview of inputs and outputs

AI	Analog input
AO	Analog output
C	Common
DI	Digital input
NC	Normally closed contact
NO	Normally open contact

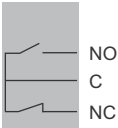Terminal	Designation	Data	Diagram
Relay output			IO module
NO	Normally open contact	Maximum contact load: 240 VAC, 2 A Minimum contact load: 5 VDC, 10 mA	
C	Common		
NC	Normally closed contact		
Powerline communication			
1	A	Signals for powerline communication	
2	B		
Alarm relay reset			
3	DI1	Terminals for alarm relay reset (NC)	
4	GND		
High water level			
5	DI2 (NO)	Terminals for high water level	
6	DI2 (NC)		
7	GND		
General-purpose alarm			
8	DI3 (NO)	Terminals for general-purpose alarm	
9	DI3 (NC)		
10	GND		

9. Technical data

Supply voltage	24 VDC \pm 10 % and 5 VDC \pm 5 %
Power consumption	Maximum 3.5 W
Cables	Cross-section: 0.5 to 2.5 mm ² or AWG 20-13
	Length: The above values apply to cable lengths not exceeding 30 metres.

9.1 Relay output

Normally open contact	C, NO
Normally closed contact	C, NC
Maximum contact load	240 VAC, 2 A
Minimum contact load	5 VDC, 10 mA

9.2 Digital inputs

Open-circuit voltage	5 VDC
Closed-circuit current	10 mA
Frequency range	0 to 16 Hz
Logic "0"	< 1.5 V
Logic "1"	> 4.0 V

Caution

Only potential-free devices must be connected to the digital inputs.

10. Maintenance

The IO module is maintenance-free during normal use and operation. The IO module must only be cleaned with a dry dust-free cloth.

11. Service

The IO module cannot be serviced. If the IO module is faulty, the CIU unit must be replaced.

12. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana Km. 37.500 Lote 34A
1619 - Garin
Pcia. de Buenos Aires
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Gröding/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssteenvweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belorussia

Представительство ГРУНДФОС в
Минске
220123, Минск,
ул. В. Хоружей, 22, оф. 1105
Тел.: +(37517) 233 97 65,
Факс: +(37517) 233 97 69
E-mail: grundfos_minsk@mail.ru

Bosnia/Herzegovina

GRUNDFOS Sarajevo
Trg Heroja 16,
BIH-71000 Sarajevo
Phone: +387 33 713 290
Telefax: +387 33 659 079
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
50/F Maxdo Center No. 8 Xingyi Rd.
Hongqiao development Zone
Shanghai 200336
PRC
Phone: +86-021-612 252 22
Telefax: +86-021-612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Cebini 37, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.grundfos.hr

Czech Republic

GRUNDFOS s.r.o.
Čejkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peturiburi tee 92G
11415 Tallinn
Tel: +372 606 1690
Fax: +372 606 1691

Finland

OY GRUNDFOS Pumpat AB
Miestarintie 11
FIN-01730 Vantaa
Phone: +358-3066 5650
Telefax: +358-3066 56550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chenes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Télécopie: +33-4 74 90 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: info@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground Floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbalint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrylewell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccezanno (Milano)
Tel.: +39-02-95383112
Telefax: +39-02-95309290 / 95383461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Dēglava biznesa centrs
Augusta Dēglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Sniolensko g.
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

México

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
e-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 34
Postboks 225, Leirland
N-1011 Oslo
Tlf.: +47-22 90 47 00
Tif.: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przemierow
Tel.: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

România

GRUNDFOS Pompe România SRL
Bd. Briuinte, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО ГРУНДФОС
Россия, 109544 Москва, ул. Школьная
39
Тел. (+7) 495 737 30 00, 564 88 00
Факс (+7) 495 737 75 36, 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

GRUNDFOS Predstavništvo Beograd
Dr. Milutina Ivkovića 2a/29
YU-11000 Beograd
Phone: +381 11 26 47 877 / 11 26 47 496
Telefax: +381 11 26 48 340

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
24 Tuas West Road
Jurong Town
Singapore 638381
Phone: +65-6865 1222
Telefax: +65-6861 8402

Slovenia

GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 1 568 0610
Telefax: +386 1 568 0619
E-mail: slovenia@grundfos.si

South Africa

Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclita, s/n
E-28110 Algiete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46(0)771-32 23 20
Telefax: +46(0)31-331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
Şti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200, Sokak No. 204
41490 Gebze/Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ ГРУНДФОС УКРАЇНА
01010 Київ, Вул. Московська 8Б,
Тел.:(+38 044) 390 40 50
Факс: (+38 044) 390 40 59
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 8TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Представительство ГРУНДФОС в
Ташкенте
700000 Ташкент ул.Усмана Носира 1-й
тулик 5
Телефон: (3712) 55-68-15
Факс: (3712) 53-36-35

97726518 1010

Repl. 97726518 0810

ECM: 1066189

The name Grundfos, the Grundfos logo, and the payoff Be–Think–Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.
